



Installation instructions

Tybox RF210 Range

www.deltadore.com


Tybox RF 210 is a pack composed of a **Tybox Control** wireless thermostat and an **RF 7210** receiver, which are delivered already associated.

There are also 2 other versions of the **Tybox RF 210** pack:


Tybox RF 210 BK = black version of the Tybox Control.

Tybox RF 210 XL = rectangular version of Tybox Control


The thermostat and receiver are also available not in a pack, sold separately.

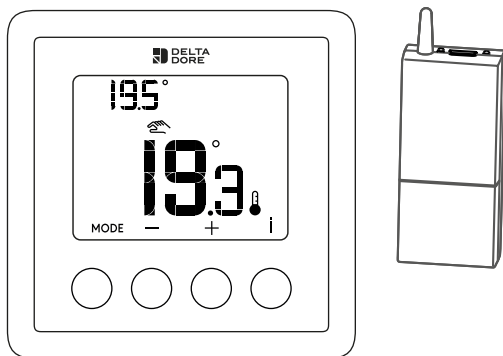

Tybox Control is available in 2 formats (square and rectangular).

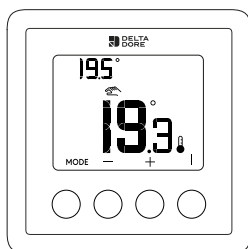

Tybox Control

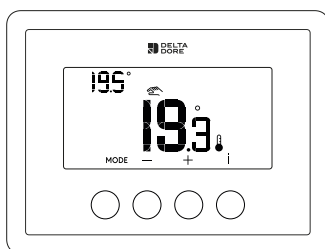

Tybox Control XL

Contents


Installation

1. Presentation	3
1.1 Description of the thermostat.....	3
1.2 Navigation.....	3
1.3 Description of the receiver	4
2. Installation of the thermostat	5
2.1 Location	5
2.2 Placing on an item of furniture.....	5
2.3 Wall-mounting	5
3. Installing the receiver	6
3.1 Location	6
3.2 Mounting / Connection	6
4. Thermostat configuration	7
4.1 Locks and limitations	7
4.2 Installation settings (i).....	8
4.3 User settings (U).....	12
5. Logging into the Tydom app	14
6. Associating a receiver or a repeater with a Tybox Control	15
7. Associating a door/window magnetic contact	15
8. Troubleshooting	16
8.1 Child lock.....	16
8.2 Possible errors.....	16
8.3 Low battery warning / Changing the batteries	16
8.4 Temperature setting limitation	17
8.5 Wireless diagnostics	17
8.6 Deleting wireless associations.....	17
8.7 Settings reset.....	18
8.8 Lost access code	18
8.9 Technical specifications	19

1. Presentation

1.1 Description of the thermostat

The interface is designed to be simple and user-friendly, for smooth navigation.

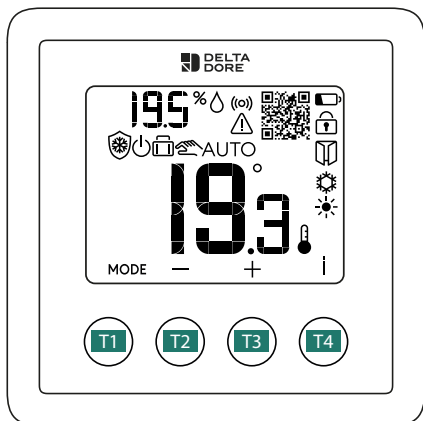

The illustrations in these instructions are based on the screen of the Tybox Control in the square version, however, the indications and symbols displayed are exactly the same for the rectangular version (XL).



Access to the online user manual



Shutdown mode with frost protection



Off mode



Absence mode



Manual mode

AUTO

Smart mode



Ambient temperature



Child lock



Open window



Cooling request in progress



Heating request in progress



Humidity level



Low batteries



Wireless fault



Fault

To make this manual easier to read, we have labelled the navigation and control keys **T1** to **T4**.

1.2 Navigation

In normal use (excluding the settings menus), the thermostat gradually switches to standby after 30 seconds without action.

To perform any operation, press a button to "wake up" the display.

Once the screen is awake, you can navigate the various menus.

The MODE button (T1) provides quick access to the manual, absence, auto (if smart) or off modes.

Use the < and > buttons to select the menu.

Use the + and - buttons to change the settings.

The ✓ button is used to confirm any changes.

Press X to exit the menu.


Press the i button to check the status of your installation.

1.3 Description of the receiver

The receiver is fitted with a 4-wire cable which must be connected as described in this manual.

All installation and operation operations are carried out from the thermostat housing with display.

The LEDs and buttons on the receiver should be used primarily for diagnostic and maintenance purposes.

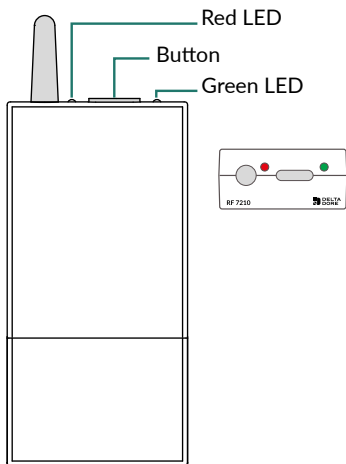

Alert type	What the lights mean
The GREEN light is constantly on	Power supply is on.
The RED light is constantly on	The relay is closed. A request is underway (hot or cold)
The RED light is flashing slowly	The receiver is in association mode.
The GREEN light flashes	The receiver isn't associated.
Both lights are flashing simultaneously.	<ul style="list-style-type: none"> - After a mains power cut: return to normal within a maximum of 5 minutes. - If communication with the transmitter is lost for more than one hour. <p>The receiver then operates in emergency mode (*).</p>

(*) Function in backup mode:

- When switching to backup mode, if the receiver control was off, it stays off otherwise it switches to emergency Frost protection.
- In this backup mode, pressing the button authorises a manual override.

3 control types are available and are shown by means of the flashing of the LEDs:


- 1 flash: Off,
 - 2 flashes: Emergency frost protection (heating 15% of the time),
 - 3 flashes: Emergency Comfort (heating 75% of the time), 24 hour timer.
- You can switch from one to the other by briefly pressing the button.

2. Installation of the thermostat

2.1 Location


Position your thermostat in the main room or in the centre of your home. Place it on a shelf or piece of furniture using the stand supplied, or fix it to a wall that is not an outside wall or in an unheated room (height approx. 1.50 m).

Install your thermostat away from sources of heat (e.g. fireplace, influence of the sun, direct sunlight...) and draughts (window, door).

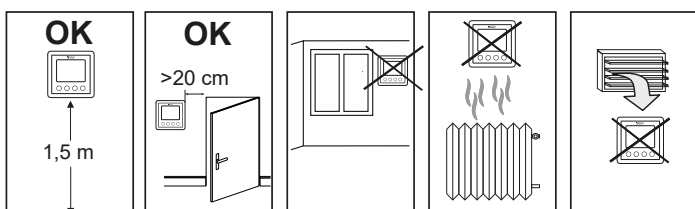


2.2 Placing on an item of furniture

- 1** Insert the batteries at the back of the housing.
Make sure that you insert the batteries facing the right way and that they are the right type (no Lithium or rechargeable batteries).
- 2** **Square version :** Clip the front of the room thermostat onto the stand.
Rectangular version: Clip the wall plate onto the back of the room thermostat then insert the support.

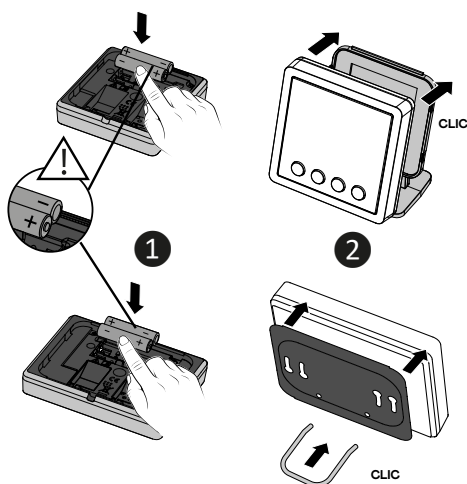

2.3 Wall-mounting


- 1** Secure the wall plate using suitable screws and dowels.
- 2** Insert the batteries at the back of the housing.
Make sure that you insert the batteries facing the right way and that they are the right type (no Lithium or rechargeable batteries).
- 3** Clip the front of the room thermostat onto the wall plate.

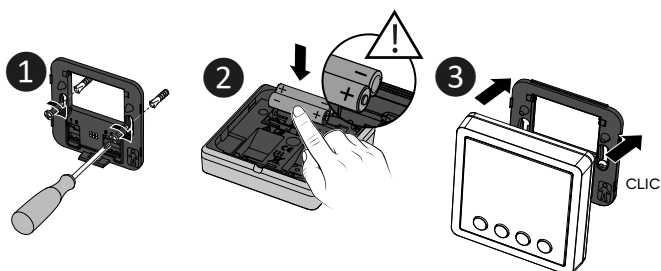

3. Installing the receiver


3.1 Location

The receiver must be installed at a minimum distance of 20 cm from any metal surface (e.g. the boiler), and about 1.50 m from the ground to ensure a good wireless link with the transmitter.

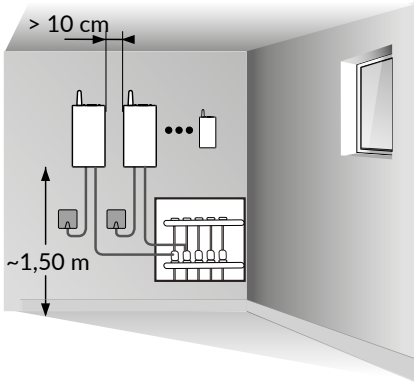

3.2 Mounting / Connection

- 1 First of all, switch off the power to your installation.
- 2 The receiver can be secured using adhesives (supplied) or with suitably sized screws.
- 3 You must make sure you comply with the wire colours when wiring.
Blue: Neutral
Brown: Phase
Black and grey: Control (contact).
- 4 Secure the cable with the cable clamp (supplied).
- 5 Once the receiver is connected, turn on the power to your installation.

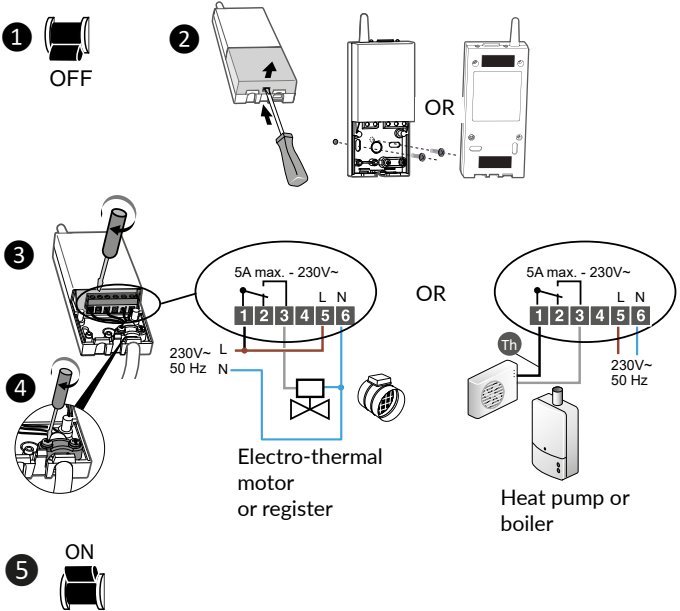

If the Tybox Control is not associated, first refer to Chapter 6 (Associating a receiver).
The Tybox RF 210 pack thermostat and the receiver are delivered already associated.

4. Thermostat configuration

The **U** and **i** menus will allow you to customise your installation.



1 Press **i** (T4) for 5 seconds, until "U" is displayed (user settings menu).



2 To move from one menu to another (Use / Installation), press **<** or **>** (T2 or T3).

3 Confirm your choice by pressing **✓** (T4).

4 Select the setting to be modified using the **<** or **>** keys (T2 or T3), then confirm with **✓** (T4).

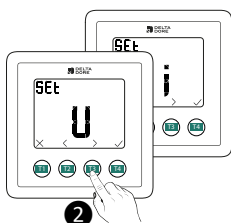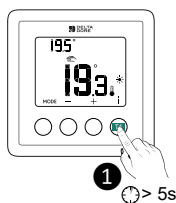5 Press the **+** or **-** keys to change the value (T2 or T3), then confirm with **✓** (T4).




i 	Installation i01: Type of lock i02 : Installer access code i21 - i22 - i23: Temperature setting limitation i31: Installation type i32: Control type i33: PID control time base: i34: Hysteresis setting i35: Activation of the anti-seizing function i41: Activation of the door/window magnetic contact i42: Door/window magnetic contact time delay i46: Activation of frost protection in heat mode i47: Setting the frost protection setpoint temperature in Heat mode
U 	Use U01: User code U02: Type of lock U03: Child lock U21: Correcting the measured temperature U31 - U32: Display settings U33 - U34: Display parameters in Standby mode U35: Backlight activation U36: Display settings in Shutdown mode

In the case of an installation where several receivers are associated with the same Tybox Control: if certain settings must be configured specific to each receiver (e.g. control time base), the receiver(s) not concerned must be switched off when applying this new setting. When viewed, the screen displays "-" when the values are different.

4.1 Locks and limitations


The thermostat settings allow different types of locks and limitations.

	Shutters
Access to the installation settings menu	i01 Locking by access code (U01 and i02)
Access to the user settings menu	
Choosing the mode and changing the set-point	U02
Limitation of the settings	i21 to i23
Child lock (No buttons are active)	U03

4.2 Installation settings (i)

If the installation setting i01 is not 0, you will be asked for an access code (000 by default).


Entering the access code: choose the digit using + or -, confirm with √ and move on to the next digit.

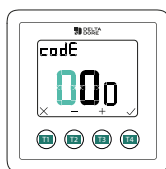

i01: Type of lock

This menu is used to protect access to the installation and/or user menus by means of a customisable code.

- 1 From the "i01" display, press √ (T4).
- 2 Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing √ (T4).

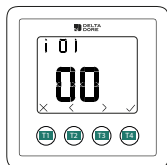

	Access to the installation settings menu	Access to the user settings menu
00	-	-
01	Unlocking by installer access code (i02)	-
02	Unlocking by installer access code (i02)	
03	Unlocking by installer access code (i02)	Unlocking by user access code (U01)


i02 : Installer access code

This menu is used to change the 3-digit installer code ("000" by default), which is only available if setting i01 is not 0.

The installer code locks access to the following functions:

- User settings (if i01=2),
- Installation settings
- Association and deletion of a wireless product,
 - Thermostat reset (return to default settings),
 - Wireless diagnostic display.

- 1 From the "i02" display, press √ (T4).
The screen displays "000" The 1st figure flashes.
- 2 Press - or + (T2 or T3) to set and press √ (T4) to confirm and move to the next digit.
- 3 Repeat the operations to determine the 3 digits of the installer access code.

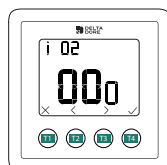

i21 - i22 - i23: Temperature setting limitation

The set-point temperature can be adjusted from +5°C to 30°C in heating mode, and from 10° to 35° in cooling mode. The values i21-i22 and i23 will be taken into account the next time the set-point is adjusted from the Tybox Control.

Heat mode



In heat mode, it is possible to limit the setting range between a maximum value (i21) and a minimum value (i22):

i21: max. value (adjustable from i22 to 30°C)

i22: minimum value (adjustable from 5°C to i21)

- 1 From the "i21" display, press √ (T4).
The temperature display flashes.
- 2 Press - or + (T2 or T3) to set the new value and press √ (T4) to confirm.


Restart operations 1 and 2 to set i22.

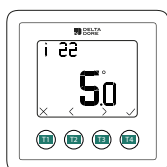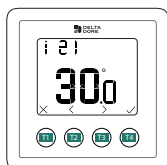

Cool mode

In Cooling mode, you limit the set point below which you do not wish to drop.


- 1 From the "i23" display, press √ (T4).
The temperature display flashes.
- 2 Press - or + (T2 or T3) to set the new value and press √ (T4) to confirm.

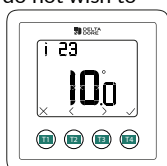

i31: Installation type

You must determine the type of installation: heating, air conditioning or heating/air conditioning, depending on what your thermostat controls.

- From the "i31" display, press √ (T4).
- Press - or + (T2 or T3) to set the setting value and press √ (T4) to confirm:

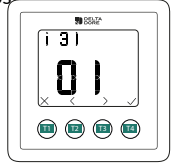

	Installation type
01	Heat
02	Cool
03	Heat/Cool

i32: Control type

You need to determine the type of control you want.

Proportional-integral derivative (PID) control accurately maintains the temperature setting, without overheating or excess energy consumption. It thus improves comfort and provides up to 10% energy savings.

On-off control is only recommended if PID control isn't satisfactory.

For example, it will run your heater until the measured temperature equals the desired temperature (temperature setting) and then the heating switches off.


This type of control does not take into account the effect of heating inertia. The "Tips" column in the following table will help you select the setting that is appropriate for your installation.

	Choice of control type	Transmitter type	Generator type	Tips
PID control	15 15 minutes	Radiator	Boiler/heat pump ⁽¹⁾	Increase the time base to extend generator run times and thus reduce the frequency of start-ups.
		Aeraulic damper	Heat pump ⁽¹⁾	
	30 30 minutes	Radiator Underfloor heating	Boiler/heat pump ⁽¹⁾	
	45 45 minutes	Underfloor heating	Boiler/heat pump ⁽¹⁾	
60 60 minutes	Underfloor heating	Heat pump ⁽¹⁾		
On-Off control	On/Off ⁽²⁾	Radiator Underfloor heating	Heat pump ⁽¹⁾	Only recommended if the PID control isn't satisfactory. Recommended hysteresis value: between 0.4 and 1
		Oven range heating		Hysteresis value: follow the value recommended by the range's manufacturer
		Aeraulic damper	Heat pump ⁽¹⁾	Hysteresis value to be adapted following installation

(1) The control is fitted with anti-short cycle protection to suppress start or stop requests when they are too short. The anti-short cycle duration is 10% of the time base selected (e.g.: if the time base is set to 30 minutes, the anti-short cycle will be 3 minutes, i.e. the thermostat will not accept any start or stop requests that are under 3 minutes).

(2) On-off control: not compatible with the RF6420 and RF6450 receivers.

- From the "i32" display, press √ (T4).
- Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing √ (T4)..

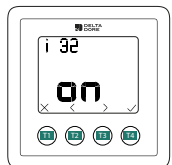


On	PID control
Off	On-Off control

i33: PID control time base:

This menu can only be accessed if you selected PID control when choosing the control type (Menu i32).

The control quality depends on parameters like the building's insulation, the number of radiators, or even the flooring type.

- 1 From the "i33" display, press √ (T4).
- 2 Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing √ (T4)..

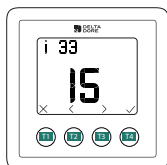


Control time base	
15	15 minutes
30	30 minutes
45	45 minutes
60	60 minutes

i34: Hysteresis setting

This menu can only be accessed if you selected On/Off control when choosing the control type (Menu i32).


- 1 From the "i34" display, press √ (T4).
- 2 APress - or + (T2 or T3) to set the desired value (from 0.2°C to 2°C). Example: Setpoint 20°C. Hysteresis 0.4°C.
- 3 Confirm your choice by pressing √ (T4).

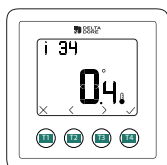

i35: Activation of the anti-seizing function

Anti-seize can be used outside heating periods to regularly start up the circulator during off periods (5 minutes/week).

- 1 From the "i35" display, press √ (T4).
- 2 Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing √ (T4):

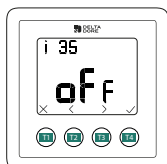

On	Anti-seizing active
Off	Anti-seizing disabled

i41: Activation of the door/window magnetic contact


Enables or disables the door/window magnetic contact function.

There can be 2 types of door/window magnetic contact function:

	Without sensor	With sensor
Detection type	Temperature measurement inside the thermostat	Associating a wireless door/window magnetic contact (optional)
Detection delay	After several minutes (*)	After 10 seconds
Term	15 or 30 minutes (setting i42)	As long as the window is open
Mode in question	Heating	Heat/Cool
Use case	Home Daily ventilation	Any type of building Monitoring openings

(*) dependent on climatic conditions and installation (thermostat positioning, building inertia, etc.).

- 1 From the "i41" display, press √ (T4).
- 2 Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing √ (T4):

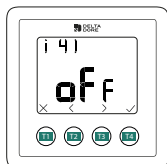

On	Window/door magnetic contact active
Off	Window/door magnetic contact inactive


Associating a door/window magnetic contact automatically sets setting i41 to on.

i42: Door/window magnetic contact time delay

This menu is only linked to the sensorless door/window magnetic contact function.


If a window is detected as being open, the heating is switched off and restarted automatically after an adjustable time delay.

- 1 From the "i42" display, press ✓ (T4).
- 2 Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing ✓ (T4):

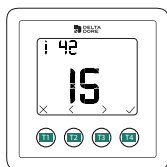

15	15 minutes time delay.
30	30 minutes time delay.


i46: Activation of frost protection in heat mode

In Heat mode, the installation can benefit from frost protection (the pictogram  appears on the screen) when the thermostat is switched off using the Mode button (T1).

This protection is an option that can be activated from the i 46 menu.

- 1 From the "i46" display, press ✓ (T4).
- 2 Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing ✓ (T4):


On	Frost protection activated
Off	Frost protection deactivated

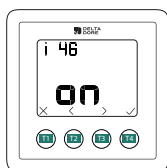

i47: Setting the frost protection setpoint temperature in Heat mode

This setpoint temperature applies in Off mode if Frost Protection is activated (i46=on), and when an open window is detected in Heat mode. The Frost protection set point temperature can be adjusted from 5°C to 16°C.

- 1 From the "i47" display, press ✓ (T4).
- 2 Press - or + (T2 or T3) to set the desired value and confirm your choice by pressing ✓ (T4).

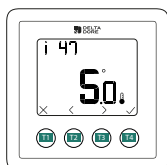


4.3 User settings (U)

If the installation setting i01 =3, you will be asked for an access code (000 by default).

Entering the access code: choose the digit using + or -, confirm with ✓ and move on to the next digit.


Otherwise, you go directly to the U02 menu.

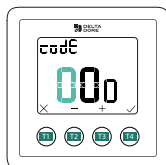

U01: User code

This menu is used to change the user code (3 digits, "000" by default), which locks access to the user settings.


- From the "U01" display, press ✓ (T4).
The screen displays "000" The 1st figure flashes.
- Press - or + (T2 or T3) to set the 1st digit.
Press ✓ (T4) to confirm and move on to the next digit.
- Press - or + (T2 or T3) to set the 2nd digit.
Press ✓ (T4) to confirm and move on to the next digit.
- Press - or + (T2 or T3) to set the 3rd digit.
Press ✓ (T4) to confirm and exit the menu.

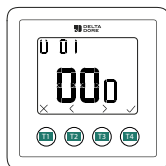

U02: Type of lock

This menu allows you to set the desired locking level.

- From the "U02" display, press ✓ (T4).
- Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing ✓ (T4).

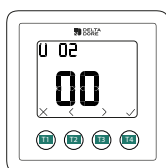


	Modes			Set-point temperature
	STOP			
00	-	-	-	-
01			-	-
02				-
03				

U03: Child lock

If you activate the child lock, the buttons will not function and changes to the temperature setting will not be possible without intentionally unlocking.

- From the "U03" display, press ✓ (T4).
- Press - or + (T2 or T3) to switch to "on" and confirm your choice by pressing ✓ (T4).

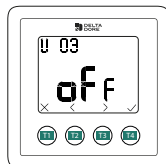

Off	No child lock
On	Child lock active


If the child lock is activated, the padlock symbol will appear on the screen when you wake up the display. To momentarily unlock (until next put into standby), simultaneously press and hold the T3 and T4 buttons for 5 seconds.

U21: Correcting the measured temperature

This menu allows you to correct a discrepancy between the temperature displayed by your thermostat and the temperature measured in the room (thermometer).

Example: if the temperature displayed by the thermostat is 19.3°C and the temperature measured is 20°C, set it to 0.7°C.


- From the "U21" display, press √ (T4). The screen displays "0.0".
- Press - or + (T2 or T3) to set the desired value (from -5°C to +5°C) and confirm your choice by briefly pressing √ (T4).

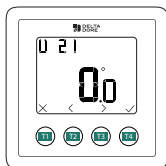

U31 - U32: Display settings


This menu allows you to determine the information you want to appear on the screen, in AUTO or Manual mode (👉).

Line 2 (U32)
Line 1 (U31)

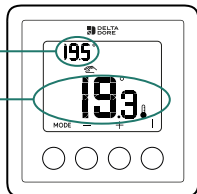

- From the "U31" display, press √ (T4).

- Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing √ (T4).

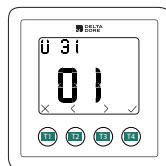


	Line 1 (U31)	Line 2 (U32)
00	-	-
01	Room temperature measured	Room temperature measured
02	Set-point temperature	Set-point temperature
03	Humidity level	Humidity level

- From the "U32" display, repeat the operations for line 2.

U33 - U34: Display settings in Standby mode


This menu allows you to determine the information that you want to appear on the screen, in Standby mode.

Line 2 (U34)
Line 1 (U33)

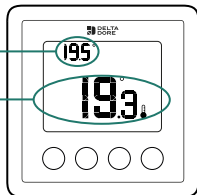

- From the "U33" display, press √ (T4).

- Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing √ (T4).

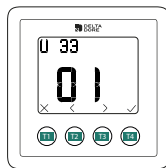


	Line 1 (U33)	Line 2 (U34)
00	-	-
01	Room temperature measured	Room temperature measured
02	Humidity level	Humidity level

- From the "U34" display, repeat the operations for line 2.

U35: Backlight activation

1 From the "U35" display, press √ (T4).

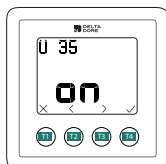

2 Press - or + (T2 or T3) to set the value of the setting and confirm your choice by pressing √ (T4)..


Off	Backlighting inactive
On	Backlighting active

U36: Display settings in Shutdown mode

This setting applies to the Shutdown mode accessible using the Mode button (T1).


Line 2

Line 1

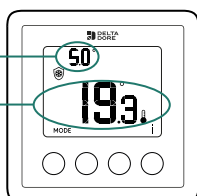

1 From the "U36" display, press √ (T4).

2 Press - or + (T2 or T3) to set the setting value and confirm your choice by pressing √ (T4).

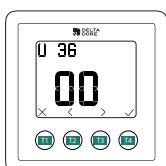

	Line 1	Line 2
00	-	-
01	Room temperature measured	-
02	Same display as that determined in settings U31 and U32.	

5. Logging into the Tydom app

To do this, you'll need a Tydom or Tywell smart home hub.

1 Turn on the smart home hub while connected to the Internet router via Ethernet.

2 Download the Tydom application



3 Associate your thermostat with the app.

From the Tydom application,

Select your home, then, from the Settings menu:

My homes -> My devices -> Add device -> Heating -> Hydraulics


and choose the product to associate from the list, then follow the instructions.



4 Check on the thermostat that "AUTO" mode is then offered on the screen in the various mode choices.


6. Associating a receiver or a repeater with a Tybox Control

In the case of a new association (products purchased separately) or after a reset, or when adding an additional receiver or repeater, you must associate them.


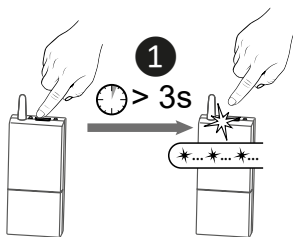
- 1 Press the receiver/repeater button for 3 seconds until the red LED flashes. Release the button.





- 2 If the thermostat has already been associated with a receiver, repeatedly press MODE (T1) to switch to Shutdown mode ( or ).

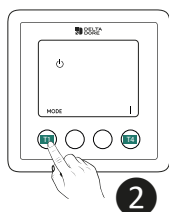

- 3 Press MODE (T1) for 5 seconds until rAd is displayed. Confirm with √ (T4).

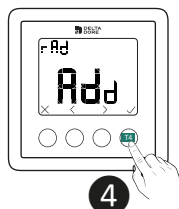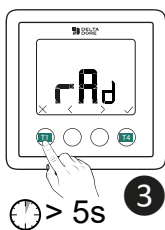

- 4 The screen displays Add. Confirm with √ (T4).

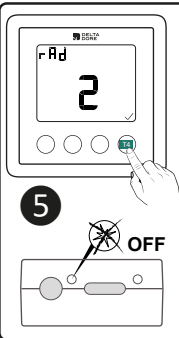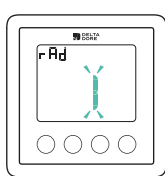


- 5 The flashing digit corresponds to the number of receivers/repeaters previously associated. The display flashes as long as the association between the thermostat and the receiver/repeater is not complete. When the display stops flashing, it updates the number of associated receivers/repeaters. The light on the receiver/repeater also stops flashing.


7. Associating a door/window magnetic contact

Associating a door/window magnetic contact, if the window is open, allows you to switch the heating to frost protection or the air conditioning to Off (within 10 seconds).


- 1 Press and hold the receiver button for three seconds until the light flashes red.

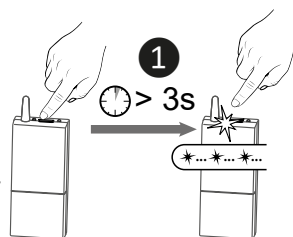

- 2 Briefly press the detector button.

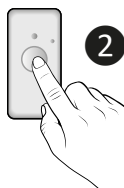

- 3 Make sure that the receiver LED has stopped flashing.

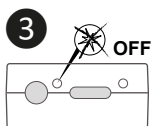


When combined with a door/window magnetic contact, parameter i41 automatically switches to "on".

8. Troubleshooting


8.1 Child lock

A padlock appears on the screen when you wake up the display.
No button is active.
This means that the child lock is activated.


To temporarily unlock this safety device (until the next time the thermostat is switched to standby), press and hold buttons T3 and T4 simultaneously for 5 seconds.
This grants access to all the settings offered by your product.

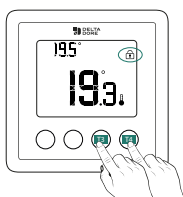


8.2 Possible errors


An error in the installation will be indicated by the  symbol.
Press the i button (t4) to find out what type of error is involved.

The screen displays	Diagnostics / Solution
00	1- No receiver has been associated to the thermostat Associate the receiver with the thermostat
01	Thermostat sensor error The product must be returned to the after-sales department.
09 ^(*)	There has been a temporary wireless communication error between the receiver and the thermostat. The error display disappears once it has been viewed.
13 ^(*)	There has been no wireless communication between the receiver and the thermostat for more than an hour. Check that the products are correctly positioned using wireless diagnostics (see paragraph 8.5).
22	You are controlling several receivers that are not in the same operating mode (heat or AC). When the fault is rectified, the unit is returned to Heat mode and the fault is cleared.
23	Humidity sensor error The product must be returned to the after-sales department.
25	You are controlling several receivers that are not in the same operating mode (Auto, Manual, Absence, Off). When the error is viewed, the unit returns to manual mode and the error is cleared.

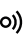(*) The  symbol appears.



8.3 Low battery warning / Changing the batteries

When the  symbol appears, you have one month to replace the batteries.

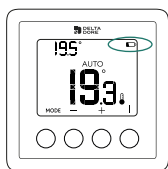

To change the batteries:

- 1 Remove the room thermostat from its stand or mount.
- 2 Replace the batteries, making sure that they are facing the right way and that they are the right type (2x 1.5V LR03 or AAA batteries, no Lithium or rechargeable batteries).

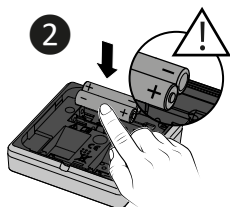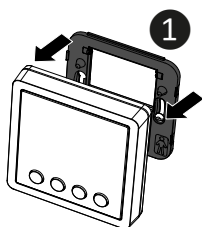



8.4 Temperature setting limitation




You are unable to set the desired set-point temperatures.
The setting ranges were limited during installation (menus i21, i22, i23).

8.5 Wireless diagnostics

This menu is used to measure the wireless quality between the Tybox Control and its receiver. This makes it possible to define the best possible location for products if there is any doubt concerning wireless transmission. If the indicated value is too low, move the thermostat closer to the receiver or add a wireless repeater (ERX1000/ERX2000) to your setup.



- 1 Repeatedly press MODE (T1) to switch to Shutdown mode ( or ).
- 2 Press and hold MODE (T1) until rAd is displayed.
- 3 Press < or > (T2 or T3) to display diA. Confirm with ✓ (T4).
- 4 The display shows the wireless transmission quality in %.





< 30 %	Too low
From 30 to 60%	Correct
> 60%	Excellent

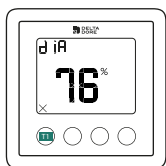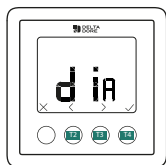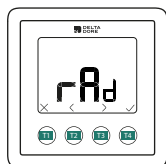

8.6 Deleting wireless associations


This menu is used to delete the Tybox Control's wireless association with the installation's receiver(s) or repeater(s). This menu does not allow you to delete a smart home hub (performed from the application) or door/window magnetic contact (performed from the receiver).

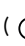- 1 Repeatedly press MODE (T1) to switch to Shutdown mode ( or ).
- 2 Press MODE (t1) for 5 seconds until rAd is displayed. Confirm with ✓ (T4).
- 3 The display shows Add. Press < or > (T2 or T3) to display dEL. Confirm with ✓ (T4).
- 4 Confirm with Yes or No using the - or + buttons (T2 or T3). Confirm with ✓ (T4).

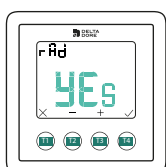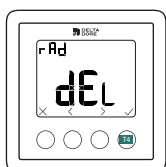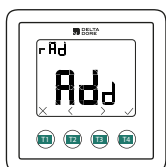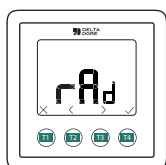

Deleting the association of a door/window magnetic contact:

Deleting the association of a door/window magnetic contact is performed via the receiver, by pressing and holding the button. The light will go through different states. Release when the red light flashes quickly (after 10 seconds)

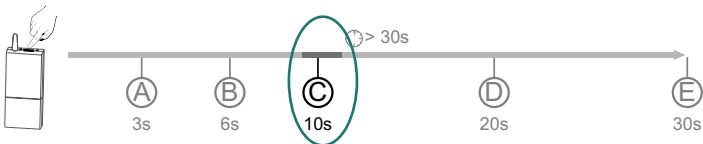

(A) : The LED flashes red. The receiver is in association mode.

(B) : The red LED is on and steady. The receiver is in "Heating configuration selection" mode.

(C) : **The red LED flashes rapidly. The receiver is waiting to delete the association with a door/window magnetic contact (check on the device you want to remove).**

(D) : The red LED turns off. All associations with the receiver are now deleted.

(E) : If you press and hold for up to 30 seconds, the LED flashes 3 times. The receiver is fully reset (returned to factory settings).

Delete the association from the Tydom application

From the Tydom application,

Select your home, then, from the Settings menu:

My homes -> My devices -> Select the device to be deleted -> Advanced options -> Delete



8.7 Settings reset

It is possible to restore factory settings.


ini i: Reset the installation configuration

ini u: Reset the user configuration


ini F: Total reset, including wireless associations.

1 Repeatedly press MODE (T1) to switch to Shutdown mode ( or ).


2 Press and hold MODE (T1) until rAd is displayed.

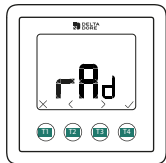

3 Press < or > (T2 or T3) to display ini. Confirm with ✓ (T4).

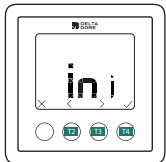

4 The display shows "iniU". Press < or > (T2 or T3) to choose the configuration to be reset (ini U, ini i or ini F). Confirm with ✓ (T4).

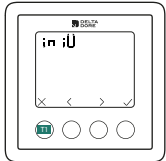

5 Confirm with Yes or No using the - or + buttons (T2 or T3). Confirm with ✓ (T4).



8.8 Lost access code

Contact our technical support

8.9 Technical specifications

Tybox Control / Tybox Control XL

- Power supply using 2 batteries:
 - 2x1.5V Alkaline - Type LR03-AAA, battery life 2 years^(*)
- Class III insulation
- Frequency range used: 868.7 MHz to 869.2 MHz
- Maximum wireless power < 10 mW
- Category 2 receiver
- Wireless range of up to max. 300 metres outside, varies depending on the associated equipment (the range can vary depending on the installation conditions and the electromagnetic environment).
- Wall-mounted or on a stand
- Tybox Control square version dimensions: 92 x 92 x 21 mm
- Tybox Control XL version dimensions: 122 x 92 x 21 mm
- Protection Class: IP 30
- Installation in an environment with normal pollution levels
- Storage temperature: -10°C / +70°C
- Operating temperature: 0°C / +55°C

(*) Battery life 2 years based on the following usage scenario:

- 5 actions per day on the thermostat,
- 25 actions per year on the thermostat settings,

RF 7210 receiver

- 230 V~, 50 Hz power supply
- Consumption: 0.8 W max.
- Class II insulation
- Contact output, 5 A max., 230V~
- Cable diameter 7 mm +/- 0.4 mm
 - Cable length: 1.25 m
- Type 1.C automatic action
- Dimensions: 54 x 140 x 25 mm
- Frequency range used: 868.7 MHz to 869.2 MHz
- Maximum wireless power < 10 mW
- Category 2 receiver
- Wireless remote control device
- Wireless range of up to max. 300 metres outside, varies depending on the associated equipment (the range can vary depending on the installation conditions and the electromagnetic environment).
- Protection rating: IP 44
 - with the supplied cable,
 - Vertical positioning of the product
- Storage temperature: -10°C / +70°C
- Operating temperature: -10°C / +40°C,
- Rated impulse withstand voltage: 2500 V